



QUANTITIES ARE REPRESENTATIVE OF ENTIRE ASSEMBLY,
NOT JUST THE VIEW SHOWN.

DESCRIPTION	QTY	PART #
CENTER CONNECT TUBE	1	AT-PLUS-18
CONNECTING ARM	2	AT-PLUS-W07
STAND	2	AT-PRO-W01
OUTER PIVOT ARM	2	AT-ELITE-W02
INNER PIVOT ARM	2	AT-ELITE-W01
"W" ADJUSTMENT BRACKET	2	AT-PRO-W06
T-ARM	2	AT-PRO-W02
ATTACHMENT ARM	4	AT-PLUS-W06
ACME THREADED ROD	2	AT-PLUS-W08
HYDRAULIC JACK	2	1-A214
ACME THREAD LOCK COLLAR	2	AT-PRO-14-W

PRODUCT IS SHIPPED WITH 1 BOX CONTAINING THE
FOLLOWING HARDWARE FOR ASSEMBLY

DESCRIPTION	QTY	PART #
5" CASTER WITH BRAKE	4	W-C5X2P-BK-TWIRL
5" CASTER W/O BRAKE	2	W-C5X2P-TWIRL
3/8" X 5" CARRIAGE BOLT	6	
3/8" X 16 TPI NYLOC NUT	6	

AutoTwirler ELITE

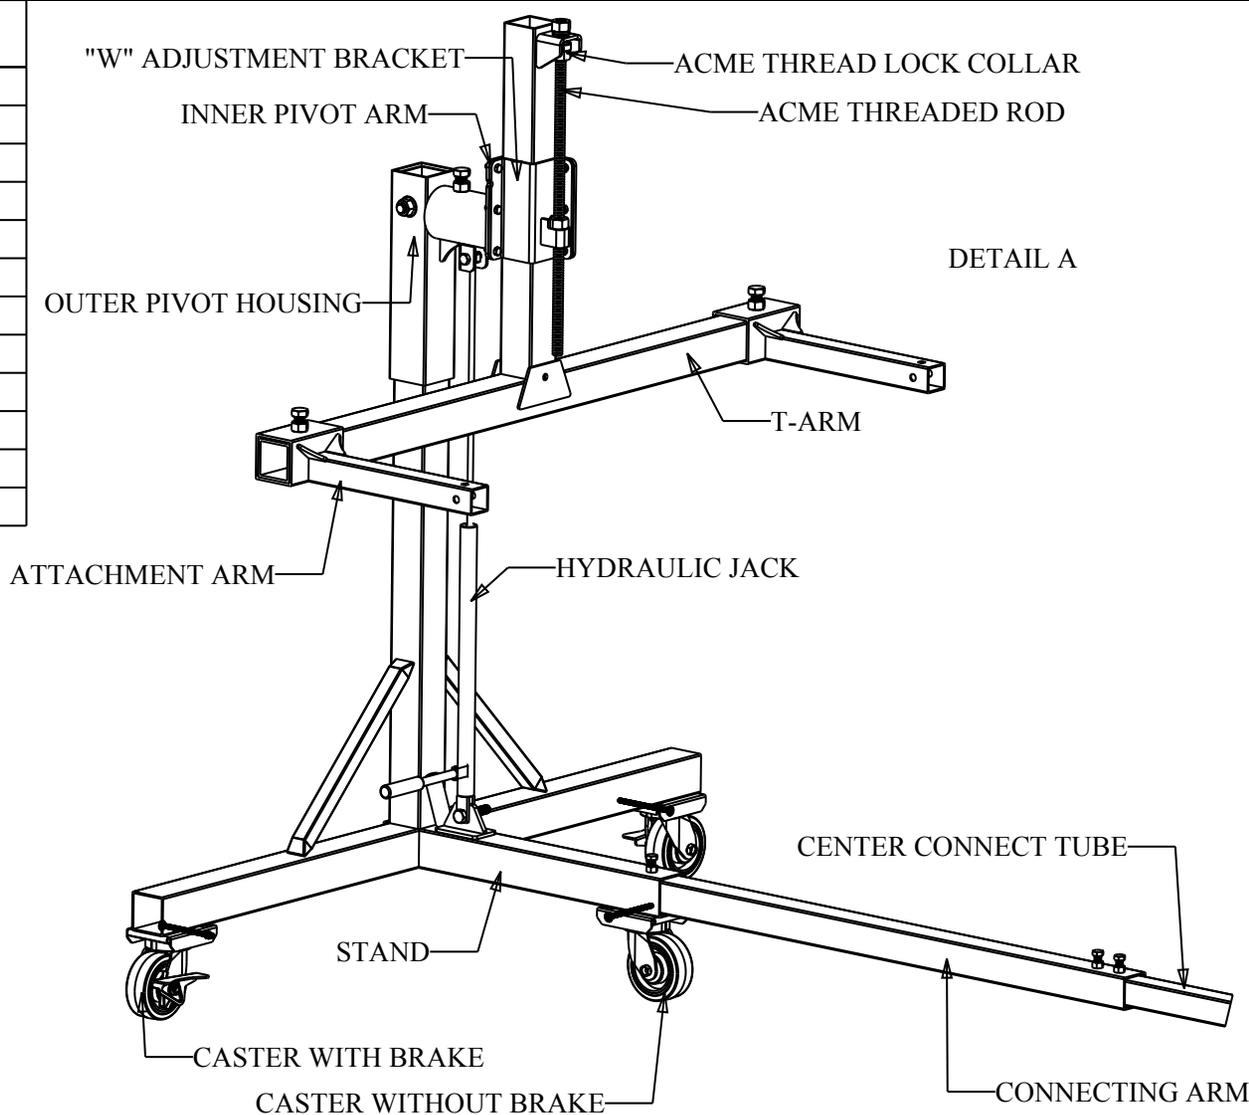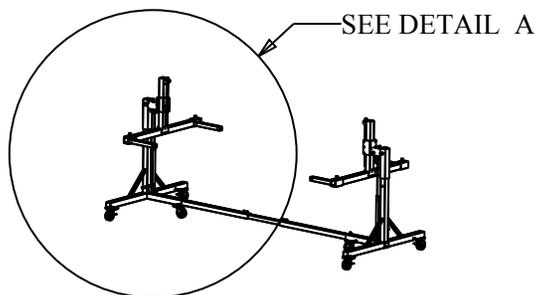

AutoTwirler®


675 N 600 W STE 2, LOGAN UTAH, 84321

email: info@autotwirler.com website: www.autotwirler.com

3/23/15


Assembly Instructions

****ALL BOLTS SHOULD BE CHECKED EVERY TIME BEFORE PUTTING ANY WEIGHT ON ATTACHMENT ARMS****

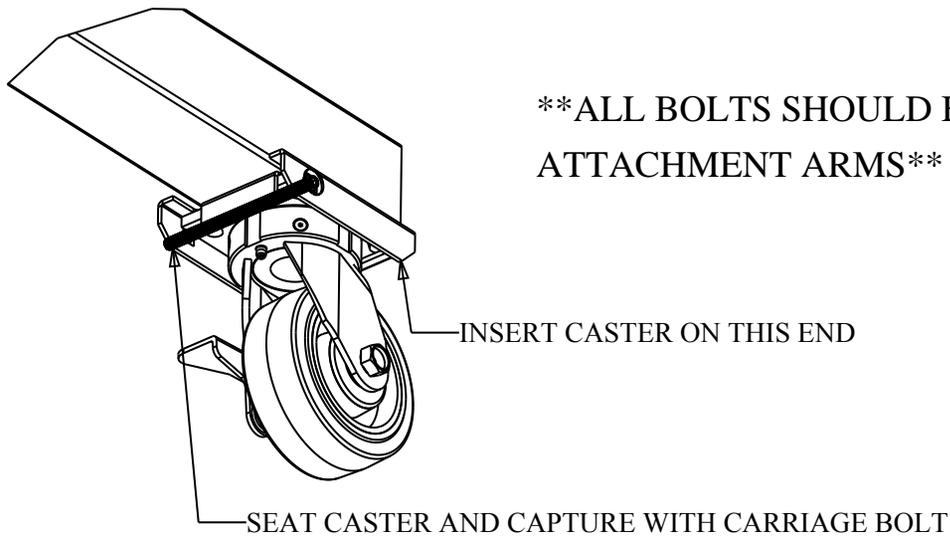

WARNING: Disassembly of the pivot is not recommended. It contains a ball bearing, and may be difficult to reassemble. Painting of the vertical member of the stand will make adjustment more difficult.

- 1.) Remove packing wrap and steel bands from pallet.
- 2.) Product is shipped with the center connect tube and 2 connecting arms inside the T-arms. To remove for assembly, loosen the bolts on the attachment arms, slide off the attachment arms, then slide out the center connect tube and 2 connecting arms.
- 3.) Slide the attachment arms back on the T-arm, and snug the bolts so they don't move.
- 4.) Next, remove the six casters with hardware from the box shipped with the rotisserie.
- 5.) The casters are placed as specified in the drawing on the previous page. To attach the casters, slide one end into the caster pad on the bottom of the stand, then seat the caster and insert a carriage bolt and fasten with a nut. Do not over-tighten.
- 6.) To connect the two stands together, assemble the connecting arms, and center connect tube as shown on the previous page.

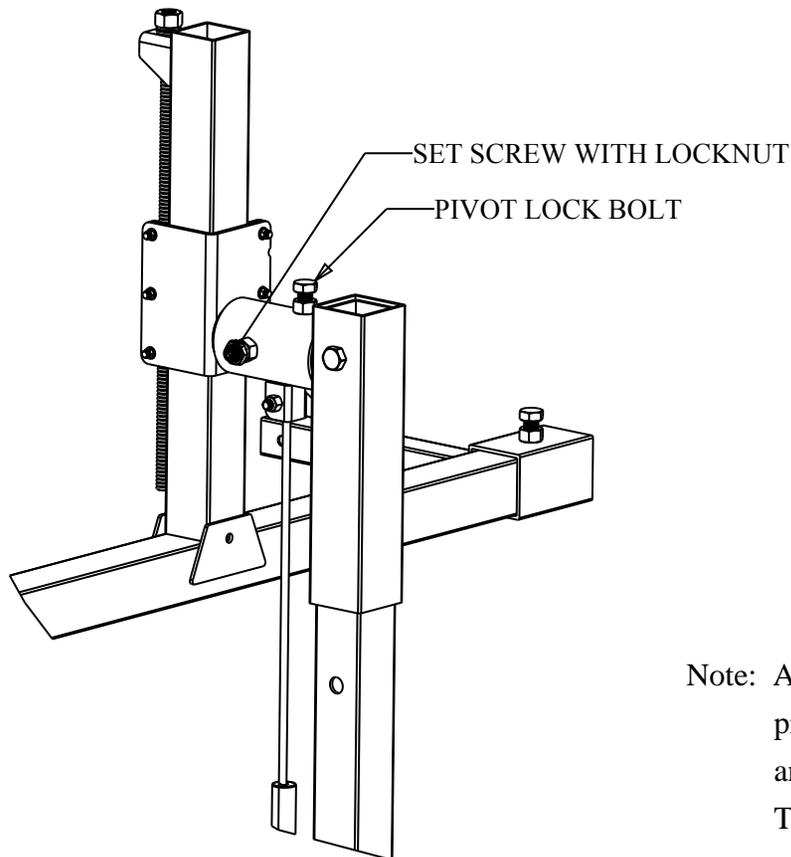

Note: A dry lubricant can be applied to sliding parts to make movement easier. The pivot comes pre-greased, but periodic greasing every 3-6 months can be done by removing the pivot lock bolt and forcing grease inside the pivot housing.

The set screw on the side of the pivot housing is a retainer and is aligned with a groove on the inner pivot. This should be kept snug to keep slight pressure against the inner pivot.

NOTICE: Before proceeding further, please make sure you have all your parts, bolts, everything. Any claim for missing pieces must be filed within 15 days of receiving your shipment. AutoTwirler will provide replacement parts as needed on a per charge basis after 15 days.

Lifting the Body off the Frame using the AutoTwirler Elite (Optional)

There are many methods to remove the body from the frame, albeit with a hoist, a 2 post lift, etc., but if these pieces of equipment are not available to you, you can use the AutoTwirler Elite to lift the body off the frame.

- 1.) Remove the casters from two towers to prevent them from rolling. Remove the bolt on the center leg.
- 2.) Lock down the pivot to prevent it from rotating.
- 3.) Push the mounting arms all the way up under the rockers on the side of the car, near the center as much as possible. Get them as far in as possible. If the frame is close to the edge of the car body, you may need to jack the body up to insert the mounting arms between the frame and the body.
- 4.) Extra support can be gained by sliding the 2 larger center tubes over the mounting arms, thereby connecting the two towers together.
- 5.) Slowly jack up each side of the car body. Keep the body level. Some bodies may be heavy in the rear and may require extra support to remain level. Additional equipment may be required to stabilize the rear.
- 6.) Roll the chassis forward, out from under the body. If the rear tires hit the center leg on the towers, use a floor jack to raise the differential enough to clear the tubing.
- 7.) Lower the body down onto jack stands, a cart, or blocks which are at least 20" high. AutoTwirler manufactures several options for this operation, like our standard body cart, body cart plus or heavy duty jack stands.
- 8.) Re-assemble the casters on the AutoTwirler Elite towers. Insert the bolt back into the center leg.



***** NOTICE *****

Improper use could result in property damage, injury, or even loss of life. Please read instructions carefully BEFORE you begin putting your vehicle on the AutoTwirler. Mounting your vehicle and finding the center of gravity will take some time. Please do not rush thru this process. If you have any questions, please contact us.

While AutoTwirler goes thru extensive measures and trials prior to selling our products to ensure they are safe, no liability can be accepted by the manufacturer, its distributors, or dealers when unauthorized modifications have been made to any component or the operating instructions were not observed. Manufacturer reserves the right to make changes in specifications, design, materials and manufacturing at any time without notification.

Mounting Instructions

1. Before mounting the car body, you **MUST** identify the mounting method or mounting location. We can offer suggestions, but the ultimate decision is yours. It must be a strong enough mount to hold the weight.
 - a. On full frame cars, you can often mount to the body mounts.
 - b. For Ford and Mopar Uni-bodies, the front mounts are on the side of the frame rails where the bumper brackets are mounted. The rear can be mounted at the bumper mount using AutoTwirler Uni-plate Brackets or at the leaf spring mount using an AutoTwirler Leaf Spring Bracket.
 - c. For Chevy Uni-bodies, the front mounts at the firewall where the subframe comes off using AutoTwirler 8" Mounting Arms. The rear can be mounted at the bumper mount using AutoTwirler Uni-plate Brackets or at the leaf spring mount using an AutoTwirler Leaf Spring Bracket. You will have to clear the rear valence.



2. **MAKE SURE THE MOUNTING POINTS YOU HAVE CHOSEN ARE STRUCTURALLY SOUND.** If not, you will need to repair, replace, or support the mounting location before mounting it to the rotisserie.
3. With the vehicle on jack stands, or cart, other elevated structure, at least 21.5" off the ground, center the AutoTwirler Elite tower to the front and rear of the car. Measure the same distance left to right from the center of the swing arm to each mounting arm. Most cars are symmetrical left to right, but if your car is heavier on one side versus the other, you may need to offset the unit to the heavier side.
4. Mount the AutoTwirler mounting arms or accessory brackets to your car body. See Step 1 for suggestions on mounting locations and methods. Tighten all bolts on all mounting locations and where the mounting arm is attached to the swing arm. The six 3/8" bolts on the mounting arm will lock down tight to prevent any rotation on the tube. The 3/4" bolt is added to bite into the tube as a secondary safety feature to prevent slippage.
5. Insert the center connecting tubes into the center legs of each tower. Make sure each tower, or base, is perpendicular to the floor and parallel to each other. Tighten the bolts on the center tubing. Do not overtighten.



6. Double check all mounting locations and the tightness of **ALL** bolts.
** A loose connection could lead to damage or injury, so do not get in a hurry here. **
7. Start lifting the car body using the hydraulic jacks. Make sure the 3/8" bolts on the collar are only slightly loose to continuously keep the clamp square on the tube. One person on each end is ideal to keep the car level. If only one person is available, lift one end 2-3" and alternate back and forth until at the desired working height. Insert the 3/4" structural bolt to securely position the height setting. Tighten all 8 of the 3/8" bolts on the clamp. Remove all previously used jack stands, or carts, that the car body was sitting on originally.

Balancing Instructions

CAUTION: Do NOT use an impact wrench on the balancer tool. It may damage the nut on top of the rod and it will loosen the shaft collar. Please only use a wrench, a drill and socket, or a ratchet and socket.

1. Start with the car in the lowest position, making the unit bottom heavy.
2. Loosen the Locking Bolt (K) on the pivot to allow movement.
3. Make sure the height adjustment is high enough so the car will clear the center when fully rotated. For safety sake, start on the top hole. Always watch the clearance when rotating the car for the first time.
4. Push on the swing arm to test the balance. The car should swing back and forth, in a pendulum motion. If it stays in a vertical position, it is balanced. Stop. If it is too heavy to push to a vertical position, it is still bottom heavy. Move to step 5.
5. Rotate the Acme Rod clockwise. The Swing Arm will be drawn up thru the swing arm clamp. You may want to loosen the clamp slightly to allow this movement. Repeat on both ends, keeping the car somewhat level.
6. Repeat steps 4-5 until the car will sit vertically without drifting either direction.
7. If the car becomes top heavy, it may flip over upside down. If this happens, rotate the Acme threaded rod counter-clockwise until you can easily turn the car back right side up.
8. If 2 people are available, you can turn the Acme rod on each end simultaneously while pushing on the car at the same time. As you draw the car up, changing the position of the center of mass, the car will be easier to push to a vertical position. Once you get the car vertical, stop.
9. After adjusting the balance, tighten the six 3/8" bolts on the swing arm clamp.
10. The pivot point is very easy to rotate with very little drag. You can tighten the 3/4" structural bolt to lock it in any position, any angle. Or if you just want a little drag on it, you can tighten that bolt slightly on one end.



AutoTwirler[®]

675 N 600 W STE 2, LOGAN UTAH, 84321

email: info@autotwirler.com website: www.autotwirler.com

3/23/15