


675 N 600 W STE 2, LOGAN UTAH, 84321

email: info@autotwirler.com website: www.autotwirler.com
3/23/15

Component Parts

- A. Base (1 piece)
- B. Post (1 piece)
- C. Casters (4 pieces)
- D. Cross Bar (1 piece)
- E. Large Coupler (1 piece)
- F. Small Coupler (1 piece)
- G. Mounting Arms (4 pieces)
- H. Mounting Hooks (4 pieces)
- J. Mounting Arms with hooks (2 pieces)

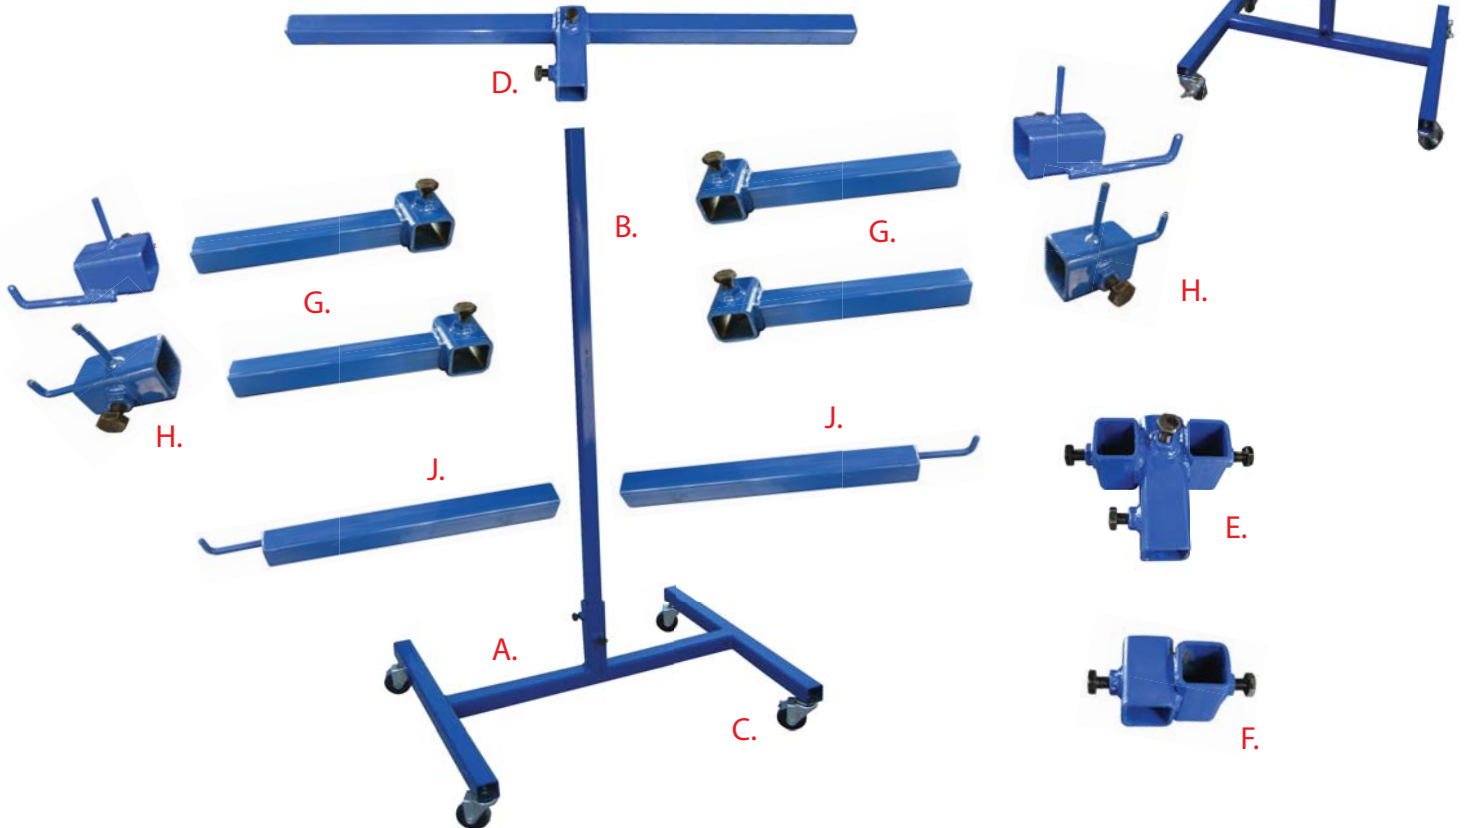

Assembly Instructions:

- a.) Assemble the casters on the base using the 4 washers and nuts provided. Check to make sure all 4 casters contact with the ground with no wobble. If so, you may need to put a washer on the caster stem prior to putting it onto the base.
- b.) Insert the vertical post and tighten both bolts in the base.
- c.) Slide couplers E and F down on the post.
- d.) Slide the top cross bar onto the post, in the same direction as the 2 outer legs. Tighten the bolts.
- e.) Slide the 4 mounting arms, without the hooks, on to crossbar. Slide the Mounting Hooks onto those arms. There are 4 Mounting Hooks.
- f.) Measure the distance between 2 holes on the back side of the door. Space the hooks the same dimensions. Hang the door on those 2 hooks. If you are mounting a fender, pull the mounting hooks back and hand the fender lip on the 2 smaller posts on top of the mounting hook. **Make sure the door or fender is hanging over the top of the wheels on the long side of the base to avoid tipping (see picture above).**
- g.) Insert one mounting arm with the hook into one of the other couplers and push out on the bottom side of the door.