

BOX 1		
DESCRIPTION	QTY	PART #
FRONT CROSS MEMBER	1	AT-MC-W02
REAR CROSS MEMBER	1	AT-MC-W01
CENTER CONNECT TUBE	2	AT-MC-W03
FRONT UPRIGHT	2	AT-MC-W04
FRONT UPRIGHT W BRACKET	2	AT-MC-09
SMALL CONNECT TUBE	2	AT-MC-06
BOLT 1/2" X 1 1/4	4	1-A206
BOLT 3/4 X 1 1/2	4	1-A239
BOLT 3/8 X 1	16	1-A205
NUT 3/8	16	1-A022


# AutoTwirler®

**675 N 600 W STE 2, LOGAN UTAH, 84321**

email: [info@autotwirler.com](mailto:info@autotwirler.com) website: [www.autotwirler.com](http://www.autotwirler.com)  
**3/23/15**

BOX 2	
DESCRIPTION	QTY
8" OR 10" WHEEL KIT	1

## Auto Twirler Mustang Body Cart

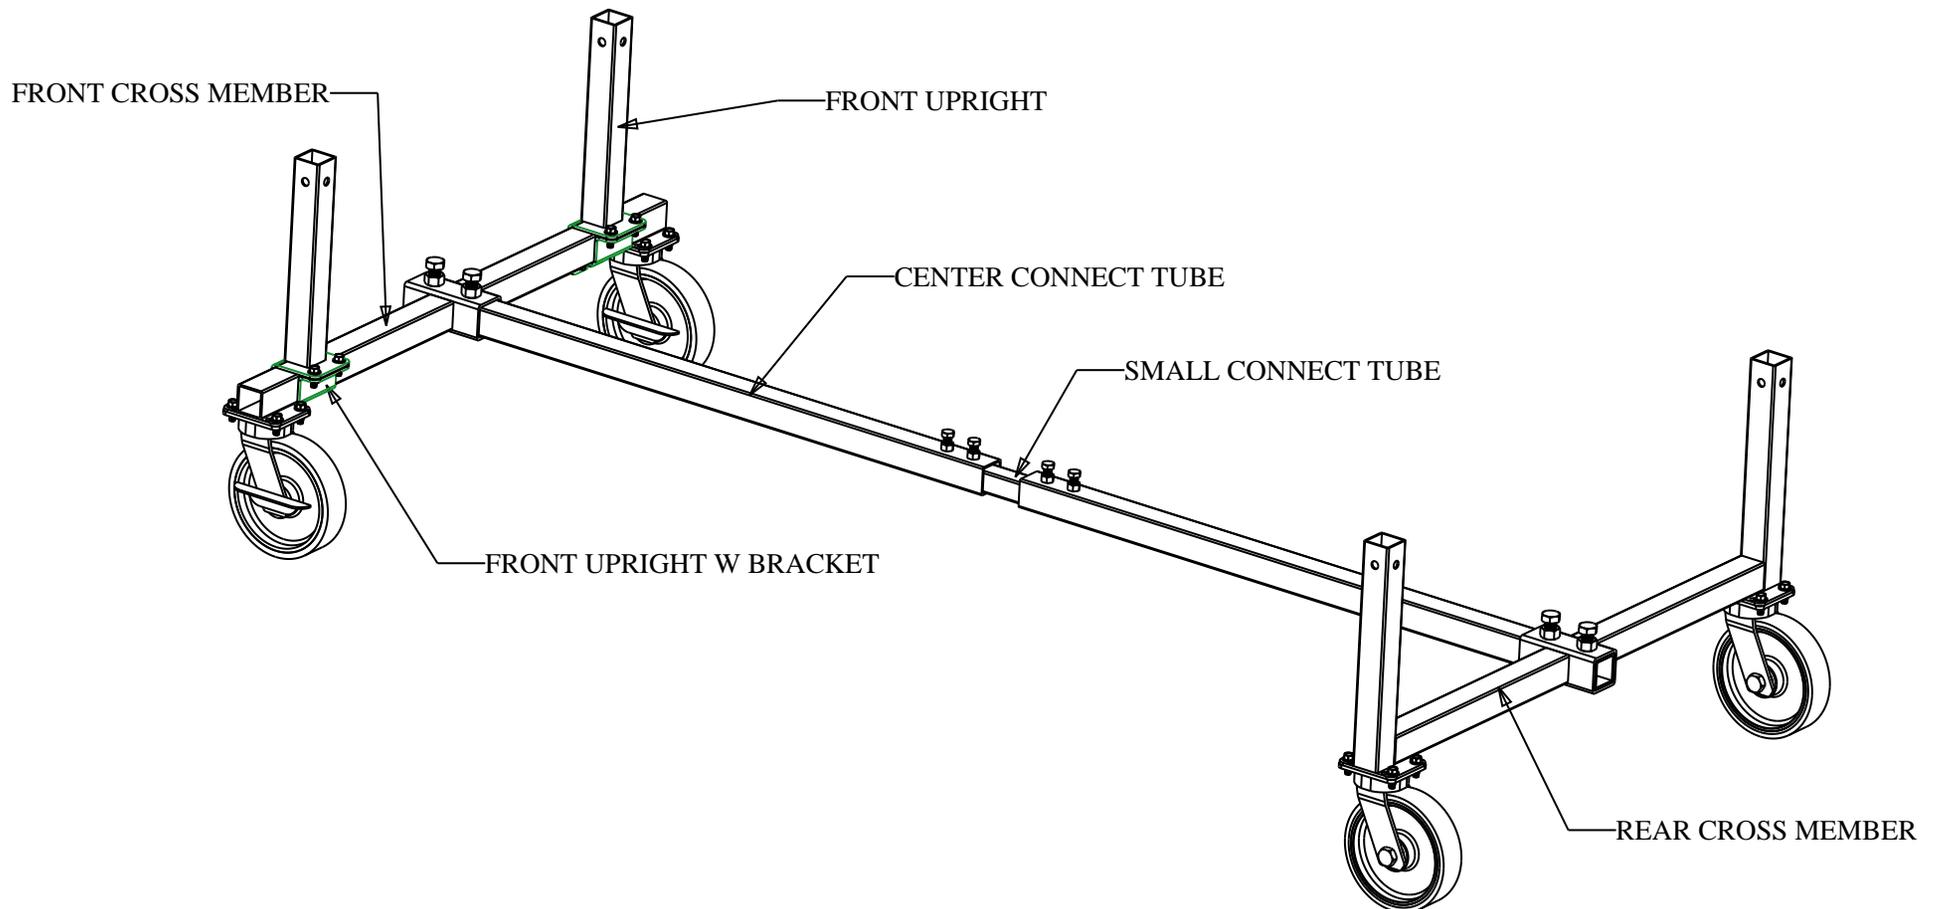

# Assembly Instructions

- 1.) Bolt the wheels to the 4 caster pads at the bottom of each leg set using the 3/8" x 1" zinc coated serrated fange head bolts and mating nuts. Tighten all bolts firmly.
- 2.) Bolt the front 2 uprights on the front cross member using the W-shaped brackets and four (4) 3/8" x 1" zinc coated serrated fange head bolts and mating nuts. Leave these bolts loose so you can adjust the width, equal distance on both sides, giving you the proper spacing between the lower A arms on the car body.
- 3.) The center tube is 2 pieces of tubing bolted together with a smaller connecting tube. Bolt the tubing together, centering the smaller connector.
- 4.) Slide the center tubing into the 6" long coupler in the center of each leg set. The center tube should be just long enough to extend to the back side of each coupler. Tighten the 3/4" bolts. Make sure all hardware is fully secured before mounting to Mustang Body.

# Mounting Instructions

- 1.) Insert the rear posts of the Mustang cart into front leaf spring shackle mount, bolting thru the holes of the rear legs and frame mount.
- 2.) Insert the front posts on the Mustang cart into the lower A arm mount and insert a bolt to hold it in place. You may have to slide the front upright posts to get the proper spacing.

